


# HP1602

## Fitting Instruction

Flexible Self Adhesive  
Fire Seal

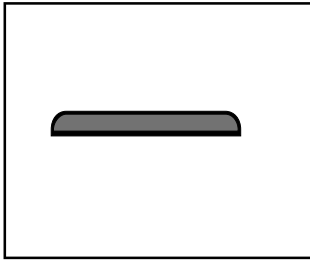

Length:

### INSTALLATION DETAIL

It is not necessary to remove the door from its hinges.

The HP1602 Seal requires a minimum of 2mm clearance between the door and frame.

#### STEP 1

Remove the seal from the packaging and measure the existing head (top) and jambs (sides) of the door frame to determine the seal length required.

#### STEP 2

Clean the frame to ensure it is free from oil, grease, loose paint, dust or moisture. **(This step is most important!)**

#### STEP 3

Using scissors/knife, trim the seal to length.

#### STEP 4

Starting with the long vertical jambs, peel back the self-adhesive backing tape by approximately 150mm.

#### STEP 5

Ensuring the seal is correctly positioned press firmly to door frame.

#### STEP 6

Progressively pull the backing tape off the seal while running a finger or appropriate blunt tool down the centre of the profile whilst ensuring that the adhesive sticks evenly.

#### STEP 7

Once the seals have been fitted to the jambs. Apply the seal to the head of the frame as per STEP 6.

#### STEP 8

If required, cut intumescent part of seal around striker plate to ensure proper closing and latching of the door assembly.

### IMPORTANT

*Do not remove and relocate seal.*

*Do not stretch the seal.*

*Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.*

*The seal may be cleaned periodically without removing the door leaf from its frame.*

### NOTE

**Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.**


**Lorient reserves the right to make alterations or delete any installation detail without prior notice.**

### DESCRIPTION OF CONTENTS

- Flexible fire seal with self-adhesive backing
- Fitting instructions

### TOOLS REQUIRED FOR INSTALLATION

- Tape Measure
- Knife / scissors
- Pencil or marker

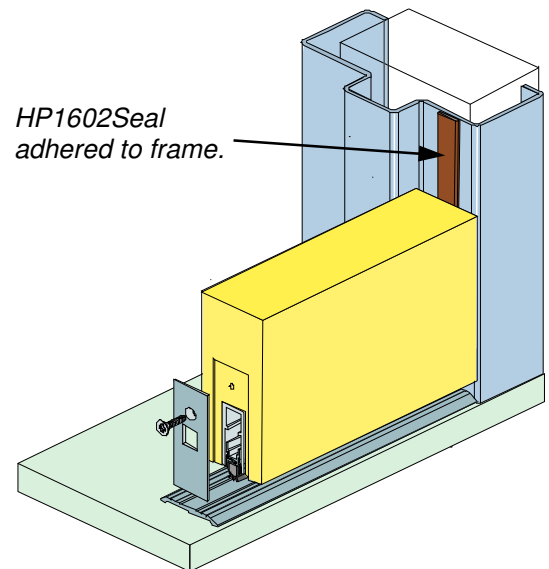

### OTHER LORIENT ARCHITECTURAL SEALS INCLUDE: INTEGRITY™ RANGE

- |                               |                    |
|-------------------------------|--------------------|
| ■ Door Perimeter Seals        | ■ Threshold Plates |
| ■ Door Bottom Seals           | ■ Brush Seals      |
| ■ Automatic Door Bottom Seals | ■ Magnetic Seals   |

Contact your nearest Lorient office for further details.

**AUSTRALIA**  
Lorient Australia

Tel 1300 858 010

**ASIA PACIFIC**  
Lorient Pacific Limited Hong Kong

Tel: (+852) 2505 0328

**EUROPE**  
Lorient Polyproducts Limited UK

Tel: (+44) 1626 834252

**MIDDLE EAST**  
Lorient Middle East Building  
Materials Trading LLC Dubai

Tel (+971) 42674339  
Fax (+971) 4267 5339