


**IS4070, IS4075,
IS4077, IS4078si.**
Fitting Instruction
Threshold Ramps

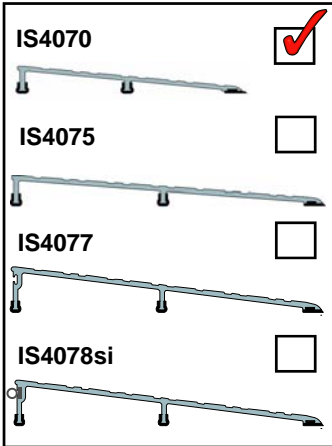

Length:

**DESCRIPTION
OF CONTENTS**

- Aluminium threshold
- Stainless Steel screws and plugs
- Vinyl feet
- Silicone rubber gasket (IS4078si)
- Fitting instruction

**TOOLS REQUIRED
FOR INSTALLATION**

- Tape measure
- Pencil or marker
- Saw (power or hand)
- Power drill
- 4.5mm drill bit
- 6.0mm masonry bit
- Countersink
- Construction adhesive

INSTALLATION DETAIL

It is not necessary to remove the door from its hinges.

STEP 1

Remove the plate from the packaging and measure the door width, between jambs or door stops to determine the plate length required.

STEP 2

Measure the threshold and mark with a pencil the desired length (and profile if cutting around the door stop).

STEP 3

Pull back the vinyl bedding feet and silicone gasket (IS4078si) and cut the threshold plate to length using a saw. Replace the vinyl feet and silicone gasket (IS4078si) and trim to length with a knife.

STEP 4

Position the plate on the door sill in required location (ensuring edge of carpet is butted up against back wall of seal).

STEP 5

Screw Fix

Using a power drill with a 4.5mm drill bit, create fixing holes in the plate at the required positions. Countersink to ensure flush screw heads.

With the plate in position, mark hole centres on the floor.

Using a masonry drill, create fixing holes. Clean away dust and insert supplied plastic plugs. Screw fix.

Adhesive Fix

Apply adhesive to the back of the threshold plate and place it in the desired position. (Discard the vinyl feet if not suitable)

STEP 6

Where the threshold ramp meets the door stop, sealant may be applied to prevent ingress of moisture.

STEP 7

Check to ensure the door can open and close without the need for excessive force.

NOTE

For effective operation, the IS4070 and IS4075 threshold ramps require a minimum of 16mm clearance between the door and the floor. The IS4077 and IS4078si requires a minimum of 21mm.


IMPORTANT – Ensure that the installation of this product does not impede the opening or closing of the door.

NOTE


Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

IS4070

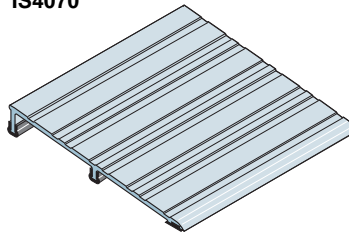

IS4075

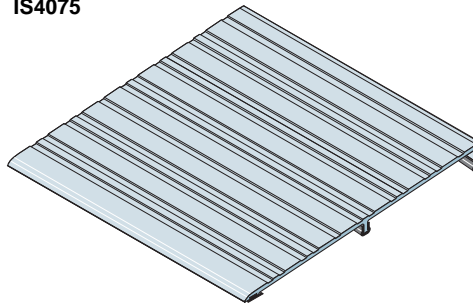

OTHER INTEGRITY™ ARCHITECTURAL SEALS INCLUDE:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Lorient office for further details.

AUSTRALIA
Lorient Australia
Tel 1300 858 010

ASIA PACIFIC
Lorient Pacific Limited Hong Kong
Tel: (+852) 2505 0328

EUROPE
Lorient Polyproducts Ltd UK
Tel: (+44) 1626 834252

MIDDLE EAST
Lorient Middle East Building
Materials Trading LLC Dubai
Tel (+971) 4267 4339
Fax (+971) 4267 5339