




**IS4030, IS4035,
IS4040, IS4045**

Fitting Instruction

Threshold Plates

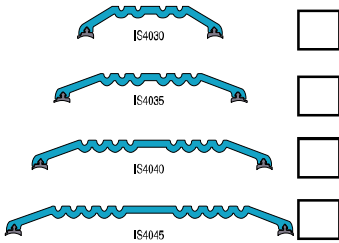

Length	
---------------	--

INSTALLATION DETAIL

STEP 1

Remove the plate from the packaging and measure the door width, between jambs or door stops to determine the plate length required.

STEP 2

Measure the threshold plate and mark the desired length (and profile if cutting around door stop) with a pencil

STEP 3

Pull back vinyl feet and cut the threshold plate to length using a saw. Trim vinyl bedding feet to length with knife

STEP 4

Position the plate on the door sill in required location.

STEP 5

Screw Fix

Using a power drill with a 3mm drill bit, create fixing holes in required position. Countersink to ensure flush screw heads

Offer seal to threshold and mark hold centres on floor.

Using masonry drill, create fixing holes. Clean away dust and insert supplied plastic plugs

Screw fix the threshold in place using screws & plugs supplied

Adhesive Fix

Apply adhesive to the back of the threshold plate and place it in the desired position.

Note: for exterior applications Where threshold plate meets the door stop, sealant should be applied to prevent water ingress).

STEP 6

Check to ensure the door opens and closes freely.

NOTE

For effective operation, the IS4030, IS4035, IS4040, IS4045 threshold plates require a minimum of 13mm clearance between the door and the floor.

IMPORTANT – Ensure that the installation of this product does not impede the opening or closing of the door.

OTHER INTEGRITY™ ARCHITECTURAL SEALS INCLUDE:


- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Lorient office for further details.

NOTE

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

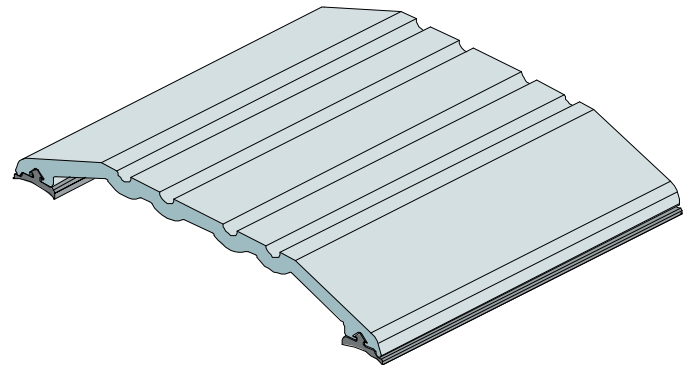

DESCRIPTION OF CONTENTS

- Aluminium threshold
- Screws and plugs
- Vinyl feet
- Fitting instruction

TOOLS REQUIRED FOR INSTALLATION

- Tape measure
- Pencil or marker
- Saw (power or hand)
- Power drill
- 3mm drill bit
- 6mm masonry drill
- Countersink
- Construction adhesive



AUSTRALIA Lorient Australia Tel 1300 858 010
ASIA PACIFIC Lorient Pacific Limited Hong Kong Tel: (+852) 2505 0328
EUROPE Lorient Polyproducts Ltd UK Tel: (+44) 1626 834252
MIDDLE EAST Lorient Middle East Building Materials Trading LLC Dubai Tel (+971) 4267 4339 Fax (+971) 4267 5339