


IS7060

Fitting Instruction


Meeting Stile Seal

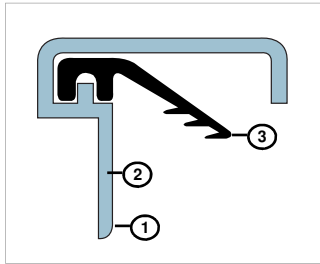

Length	
--------	--

FACE-FIXED INSTALLATION DETAIL

It is not necessary to remove the door from its hinges unless otherwise specified.

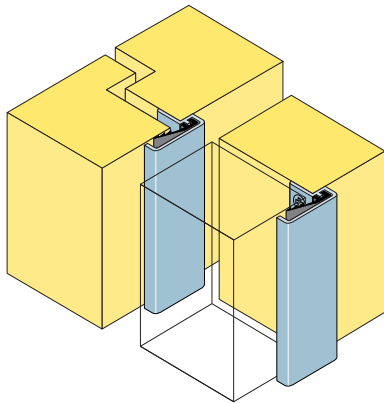

STEP 1

Remove the seal from the packaging and measure the height of the meeting stile.

STEP 2

Pull back flexible gasket and cut aluminium carrier to required length.

STEP 3

Slide flexible gasket back into position and cut to required length.

STEP 4

Position seal against meeting stile and mark out the hole locations with a pencil.

STEP 5

Drill pilot holes with a 2.5mm drill bit (if required).

STEP 6

Lightly screw fix the length to the meeting stile using the screws supplied.

STEP 7

Close the door and ensure the seal makes uniform contact with the opposite door leaf.

STEP 8

Tighten screws as necessary.

REBATED INSTALLATION DETAIL

STEP A

Remove the active door leaf (the door leaf which opens first) from its hinges.

STEP B

Using a router, rebate a 12mm wide x 1.5mm deep groove to the stile of the active leaf.

STEP C

Re-hang the door and follow fitting instruction steps 1 to 8 of the "Face-fixed to Meeting Stiles".

We recommend the IS7060 seal be fitted with Lorient Integrity™ 7000 series perimeter seal and an 8000 series automatic door bottom seal.

IMPORTANT – Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

OTHER INTEGRITY™ ARCHITECTURAL SEALS INCLUDE:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Lorient office for further details.

NOTE

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

DESCRIPTION OF CONTENTS

- Aluminium carrier (1)
- Pre-drilled, countersunk fixing holes (2)
- Flexible gasket (3)
- Fitting instructions

TOOLS REQUIRED FOR INSTALLATION

- Tape measure
- Saw (power or hand)
- Screw driver
- 2.5mm drill bit
- Drill (power or hand)
- Knife
- Pencil or marker
- Router (Rebated Installation)