


IS7300si Set

Fitting Instruction

Glass door meeting edge seals with silicone rubber seals.

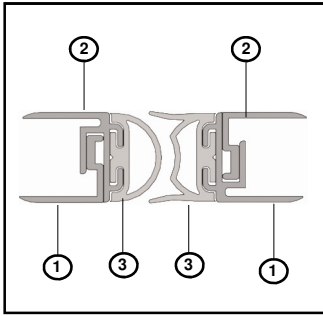

Length:

DESCRIPTION OF CONTENTS

- Aluminium gasket carrier (1)
- Aluminium side leg (2)
- Silicone rubber gasket (3)
- Fitting Instruction

TOOLS REQUIRED FOR INSTALLATION

- Tape measure
- Saw (power or hand)
- Knife
- Pencil or Marker

INSTALLATION DETAIL

STEP 1

Remove the seals from the packaging and measure the height of the meeting edges.

STEP 2

Mark the length on the aluminium carrier. Cut to size using a knife for the silicone seal and a saw for the aluminium carrier.

STEP 3

Wipe down the door edges to ensure it is free of grease or dust.

STEP 4

Separate the gasket carrier and side leg. Remove the self adhesive backing tape from the gasket holder (1) and firmly apply to the edge of the glass door.

STEP 5

Remove the self adhesive backing tape from the side leg (2). Starting at the top of the door engage it into the gasket carrier and bring the two together.

STEP 6

Press the two firmly together to ensure that the self adhesive tape is adhered to the glass.

STEP 7


Repeat the process for the opposite meeting stile.

NOTE

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

IMPORTANT – Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes properly.

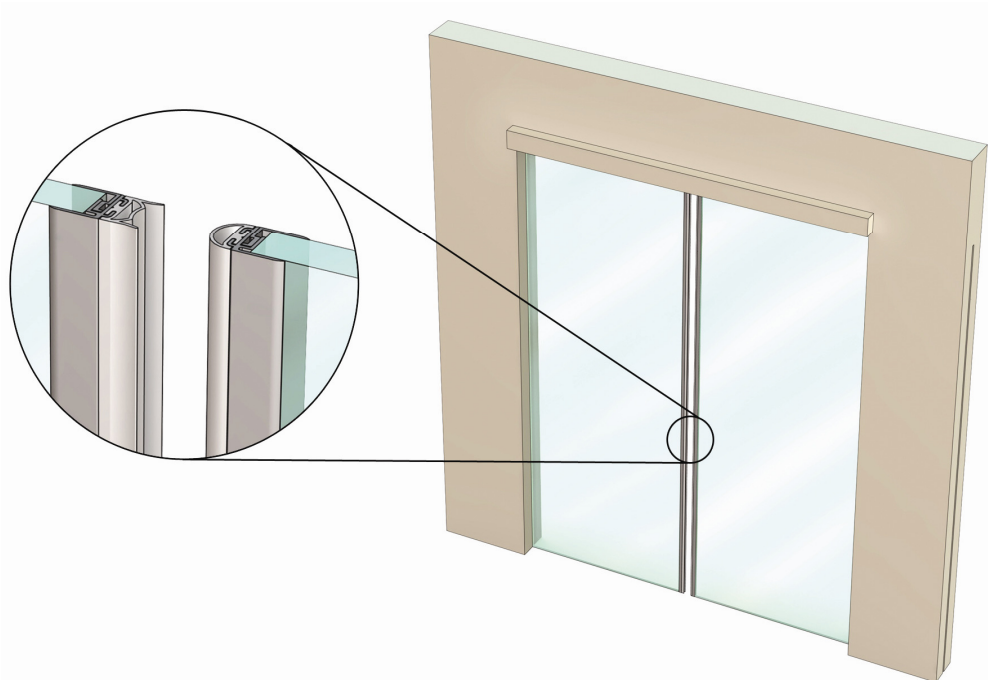

OTHER INTEGRITY™ ARCHITECTURAL SEALS INCLUDE:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Lorient office for further details.